


HOW TO ENSURE YOUR BOW AND TWIST DESIGN EXCEED NORMAL TOLERANCES

Some examples on what to remember in your DFM review:

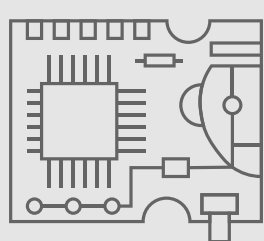


1 OPTIMISE COPPER DISTRIBUTION




2 SYMMETRIC BUILD AND EQUAL COPPER WEIGHT



3 AVOID LOW-PRESSURE AREAS WITH COPPER FILLINGS

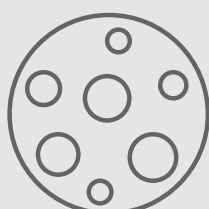

4 LOOK OUT FOR SPLIT GROUND PLANES

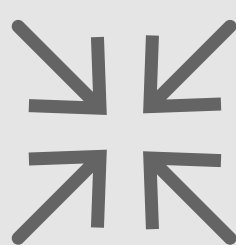

5 PAY ATTENTION TO THE BREAKAWAY AREA



6 BE "DESIGN SMART" AND AVOID VERY THIN MULTILAYER

#talktothePCBexperts

ELMATICA®